

POWERMADD® Oil Sleeve

Installation Instructions for Part No. 53740

HARDWARE INCLUDED:

Qty	Description
1	Oils Sleeve
1	O-Ring

TOOLS REQUIRED:

Heat gun



NOTE: The Oil Sleeve is used to keep warped or out of round oil reservoir openings from leaking.

STEP 1: Remove oil sleeve and o-ring from packaging and install the o-ring over the oil sleeve. Photo 1

STEP 2: Remove oil cap from oil reservoir.

STEP 3: Fit oil sleeve into oil sleeve reservoir. Photo 2

NOTE: The oil sleeve should fit snug. If the oil sleeve does not fit because the oil reservoir opening is out of round, use a heat gun to lightly heat the opening until the sleeve installs easily

STEP 4: Reinstall the oil reservoir cap.



LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is in effect for one year from the original purchase date.