

4T65-AFL

A *Simple Drop in Repair* for a worn Actuator Feed Limit Bore.



Step 1. Discard original AFL valve & spring, install New Bushing, Valve, Orange spring & spacer. Reuse the original retainer.

New Bushing may be a little tight going in, due to wear ridge. Use either end of the old valve to push the new bushing into place if necessary. The new bushing never moves in the bore once installed so its ok to be tight.

Discard original AFL valve & spring

