

PERRIN

Fender Shrouds for 08-14 WRX/STI

2020-03-04

PSP-ENG-549

Thank you for purchasing this PERRIN product for your car! Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached in any of the following methods:

Email Tech@PERRINperformance.com

Instant Chat off the main page of www.PERRINperformance.com

Or simply call our tech team at 503-693-1702




WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

Included Parts with PERRIN Fender Shrouds:

- (1) Fender Shroud Left
- (1) Fender Shroud Right
- (6) M6x16 Button Head Screw
- (6) M6 Fender Washer
- (8) Black Nylon Spacers
- (1) M4 Hex Wrench


**Remove (3) M6 Bolts
From Both Fenders**

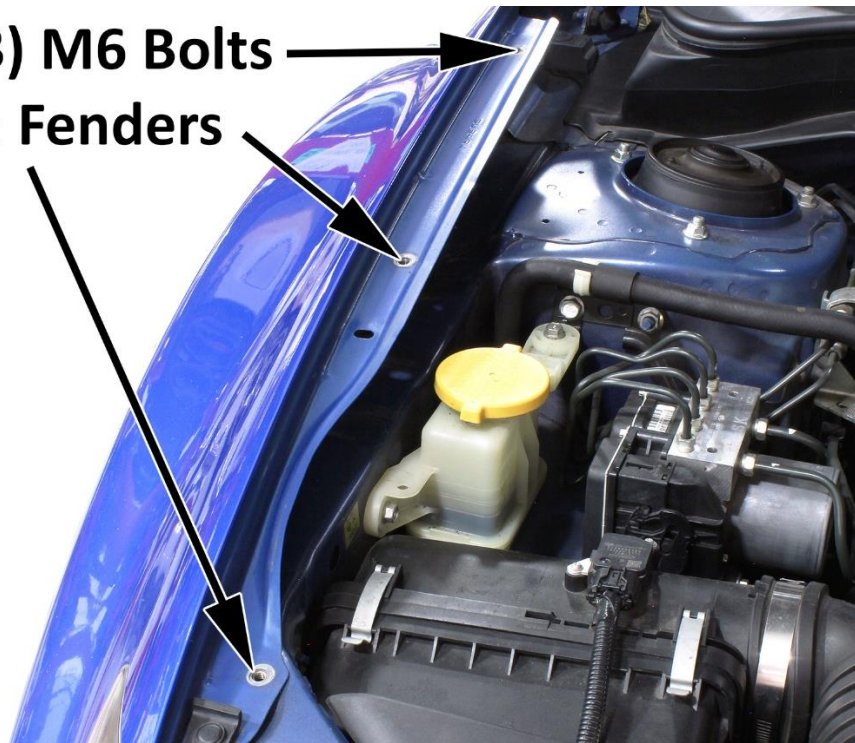

Installation Instructions

1. With hood closed, take note of gap between fender and hood. Due to loosening of fender bolts, this gap could change after installation. This can be adjusted during the last step if fender does not line up as desired.
2. Open hood and locate and remove (6) M6 bolts holding both left and right fender to chassis.
 - a. These fasteners are factory painted and will crack slightly as they are loosened.
 - b. Your fender may be under some tension and move when these are loosened. Take note of this as some adjustment may be necessary during the last step of final tightening of hardware.
3. Install supplied plastic spacers on both fenders as shown in picture below, making sure that (2) spacers get installed over the front most holes.


**Install 1 Spacer Over
Each Hole**

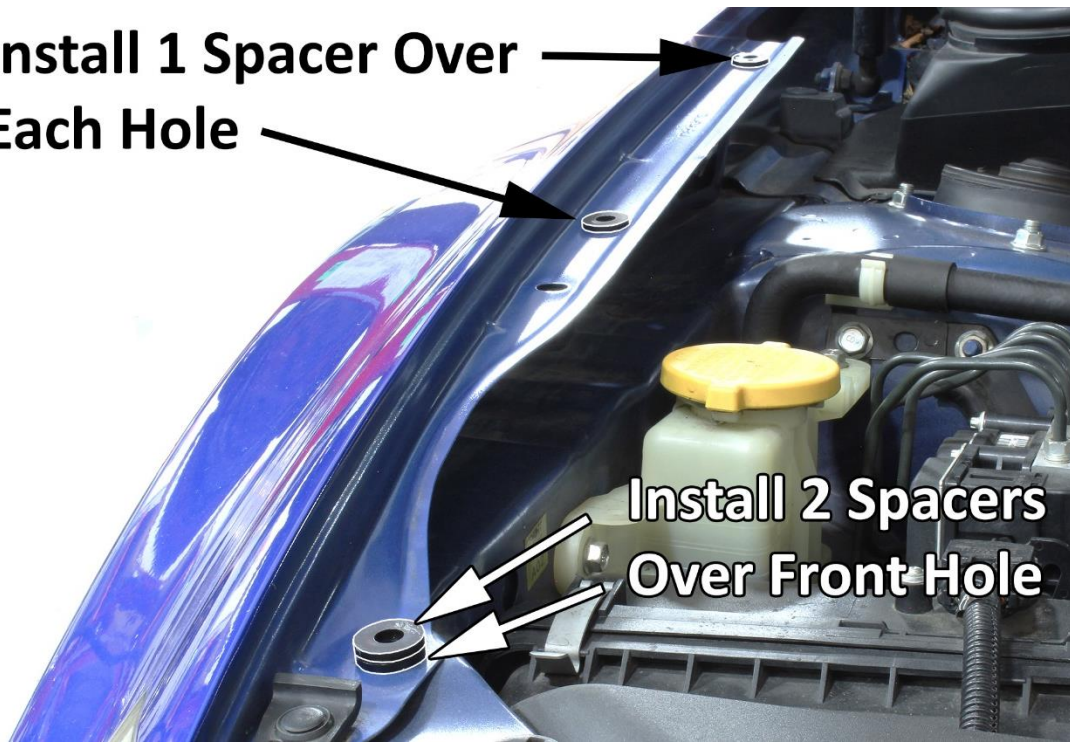

**Install 2 Spacers
Over Front Hole**

4. Set fender shrouds over spacers and align with holes in chassis. Starting with rear most hole, install supplied washer and bolt through shroud, and through spacer into the chassis. Work your way up to the front bolt where the shroud will need to be pressed down slightly to get bolt started.
5. With bolts started, move fender shroud to desired position and tighten bolts.
NOTE: Make sure that bolts pass through the center of each spacer during this step.
NOTE: If fender moved during step 1, you may have to move fender back while tightening bolts. After this is done, check that fender lines up with hood as it did before step 1.
6. Check hardware for tightness after a week of driving to ensure they have not loosened.

**Install Bolts And
Washers**

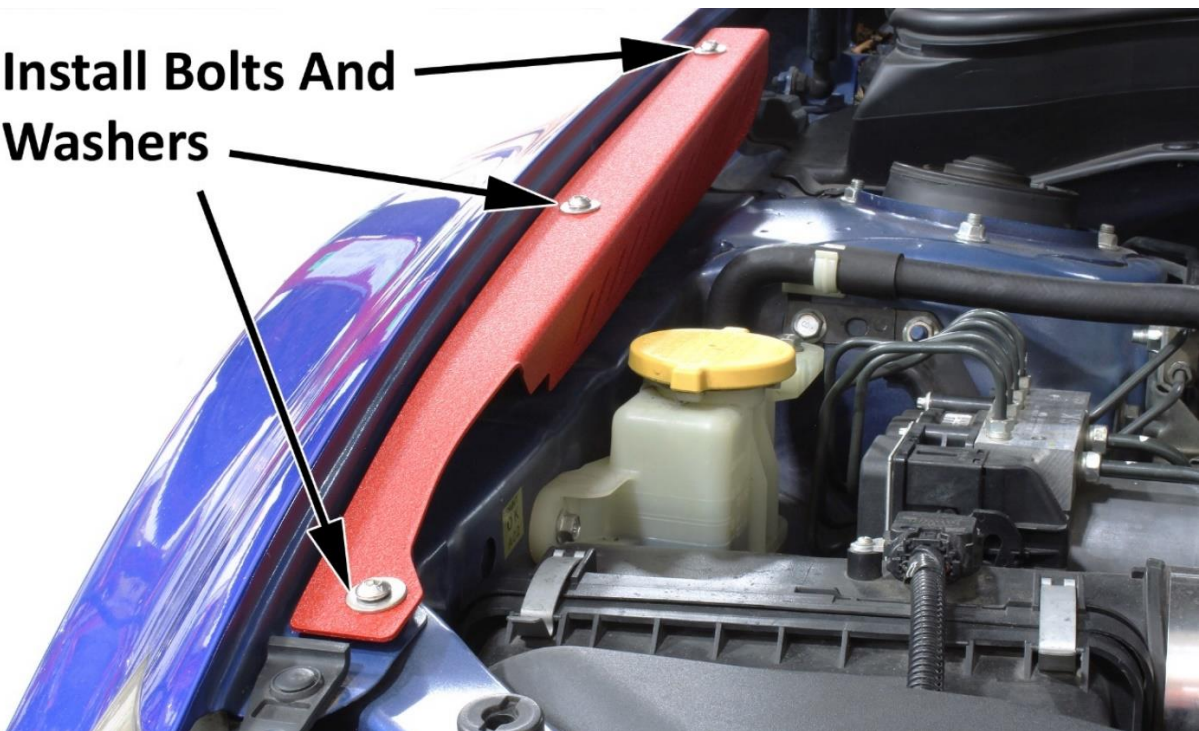

Questions, Comments, and Suggestions Contact: Tech@PERRINperformance.com
Visit Our Website for Instant Chat Options at www.PERRINperformance.com
Call Our Tech Team at 503-693-1702