


3

Place the 2 screws on the bottom of the bumper as shown in the picture. Use the small square supports (included on the hardware kit) as a guide, place them from behind and get the screws tighten.

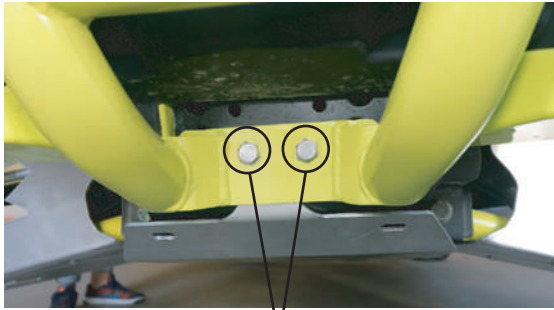

(2)Screws (3/8 X 1")
(2)Squares with nuts (3/8")

4

In order to finish, tighten all the screws.

For technical support , please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521

HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

HIGH IMPACT STEEL FRONT BUMPER INSTALLATION MANUAL



**POLARIS RZR
2 & 4 SEATS**

DEF046

THANK YOU!

FOR PURCHASING AT AFX MOTORSPORTS



HIGH IMPACT STEEL FRONT BUMPER FOR POLARIS RZR

HOW TO INSTALL


Pieces included:



(2x) Spacer 2 1/4"



(2x) Special support



Front bumper

Hardware:

- (2x) 3/8 x 1" Hex Screws and nuts
- (2x) 3/8 x 3 1/2" Hex Screws and nuts
- (6x) 3/8" Flat Washer

Tools needed (Not Included):


- T30 Torx Screwdriver.
- 5/32" Allen Key.
- 7/16" or 14 mm Combination Wrench.

Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warranted if item was not installed properly, misused, or modified.

1

Remove the grill that is shown in the picture.

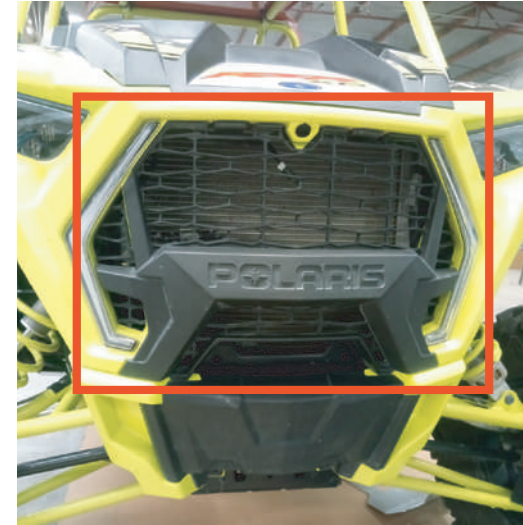

2

Place the bumper with 2 screws (3/8" x 3 1/2") and flat washers then place the 2 spacers (2 1/4"), and fix the nut in the back holding the OEM Support (1/4") do not tighten yet.

