



## ALUMINUM ROOF INSTALLATION MANUAL



Now you have completed the installation.

For technical support , please write us to:

info@afxmotorsports.com or call us at:

Ph. 956-242-6521

**HAVE FUN AND A SAFE RIDE!**



www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

**THIS PRODUCT IS FOR OFF ROAD USE ONLY**

## CAN AM MAVERICK COMANDER 4 SEATERS

## SKU TEC 004

# THANK YOU!



## FOR PURCHASING AT AFX MOTORSPORTS



## FRONTAL RACK FOR CANAM MAVERICK X3

### HOW TO INSTALL

Pieces included:

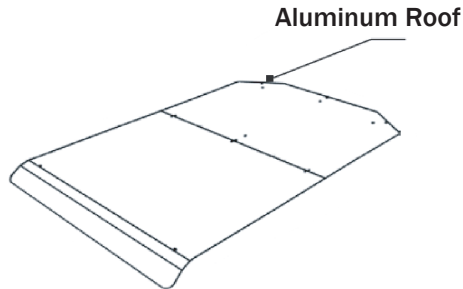

(6x) Tube Clamps #1



(1x) 1/2" Anti-rattling Strip

Hardware:

- (14x) 1/4 x 3/4" Bolts with flat washers and nuts

Tools needed (Not Included):

- T30 Torx Screwdriver.
- 5/32" Allen Key
- 7/16" or 14 mm Combination Wrench.

**TIP: Install the Bolts Finger tight at first until all hardware has been installed.**

#### Liability Statement

AF1 Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AF1 Motorsports and is not recommended. AF1 Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AF1 Motorsports to verify that they will work together. Although AF1 Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AF1 Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AF1 Motorsports products, user agrees that should damages occur, AF1 Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AF1 Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AF1 Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AF1 Motorsports will warranty only parts provided by AF1 Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AF1 Motorsports. AF1 Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

1

In case of having the OEM Plastic roof, uninstall the original plastic roof of the vehicle, removing the screws located on the rear and front part of the roof.

DOES YOUR CAR HAVE SIDE COVERS?



2

Place the aluminum roof and align the holes from the aluminum roof with the original holes on the roll cage.

3


Fasten the front part with two 1/4" x 3/4" screws with washers and 1 nut. (Do not tighten yet).

4

Use the three clamps #1 (included) to adjust the rear part of the roof with washers and nuts (included) and tighten them.

5

Use the three clamps #1 (included) to adjust the central part of the roof with washers and nuts (included) and tighten them.

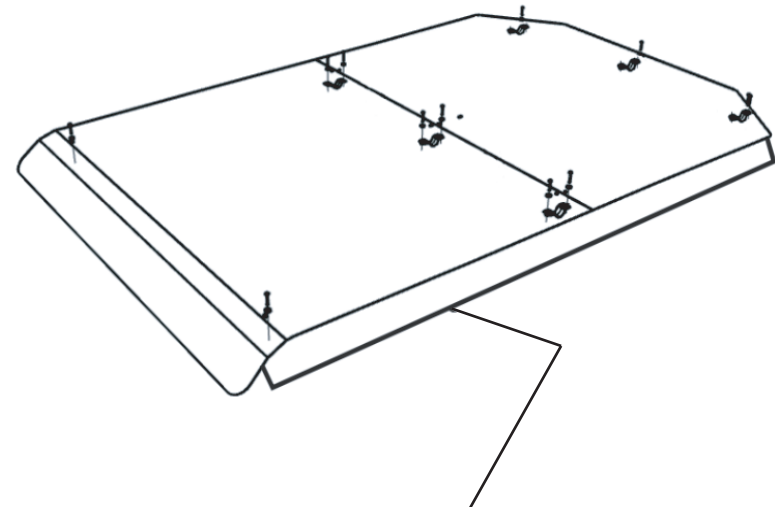

Anti-rattling Strip