



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions


Kawasaki KRX 4 Inner Fender Liners TAFENDERLINERS-KRX4

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.



- Remove (2) OEM screws on the passenger side heat shield. (See Picture 1).
- On the Passenger side insert (2) OEM Screws back into the heat shield. (See Picture 2).
- Place (2) 1" TEK screw into the locations shown in (Picture 3).

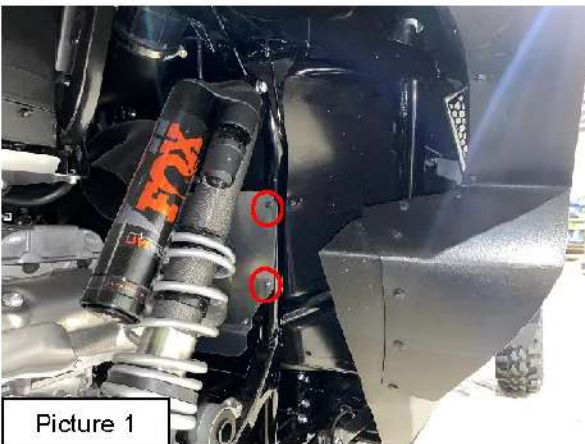





TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

- D. Place the Driver Side Fender Liner into the location shown in (Picture 4).
- E. Place (3) 1" TEK screws into the locations shown in (Picture 5).

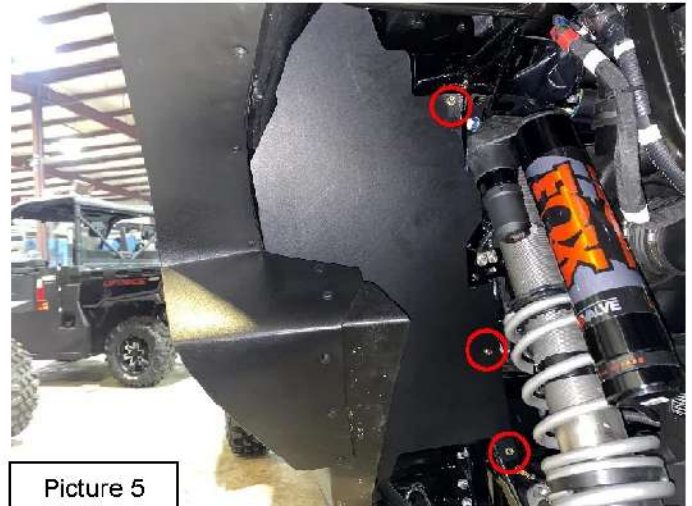

- F. See Pictures 6 & 7 for Final Install.

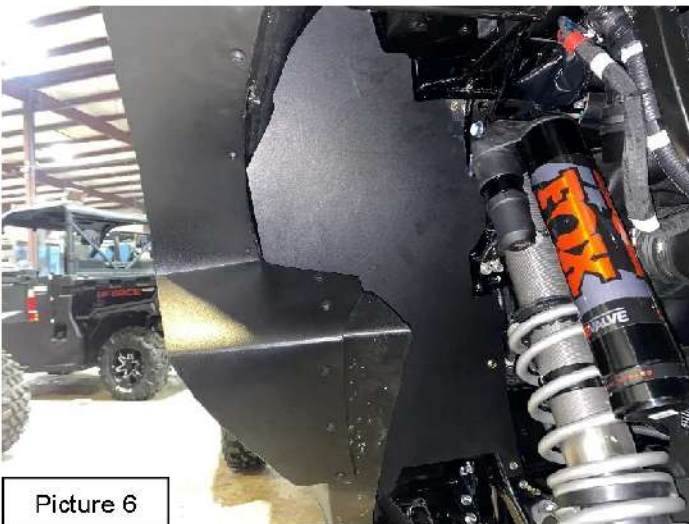

Enjoy! Any questions, contact Trail Armor at 662-233-5700.