CORVETTE C8 CARBON FIBER FRONT LIP


coro


Installation Manual 장착 설명서

Front 전면부


Carbon Fiber Front Lip 카본파이버 프론트 립

- ① Remove Genuine Bolts left and right symmetry.
- ② After determining the most suitable fitting position for left and right symmetry, use a Genuine bolts to temporarily fasten it in place.
- ③ Set all components with the power tool according to the designated Install points.

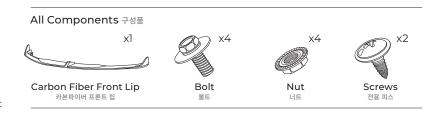

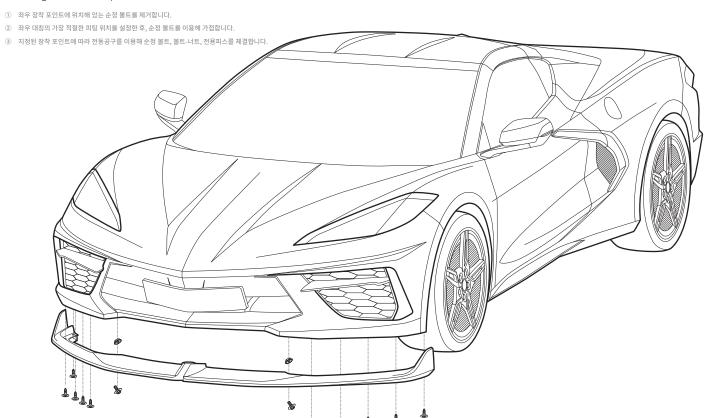

Install Points 장착 포인트

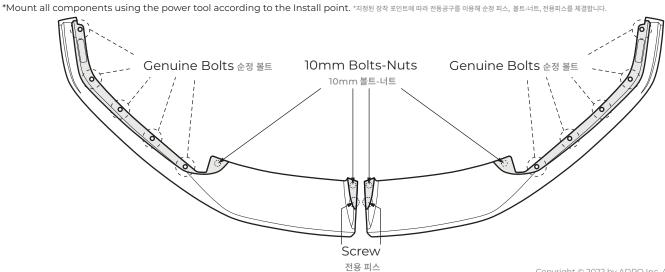

CORVETTE C8 CARBON FIBER SIDE SKIRTS




Installation Manual 장착 설명서


Side 측면부

Carbon Fiber Side Skirts 카본파이버 사이드 스커트

- ① Remove Genuine Bolts according to the designated Install point.
- ② After applying primer on the car body, remove the film of the double-sided tape slightly outward. Once fitting is adjusted perfectly completely remove double-sided tape.





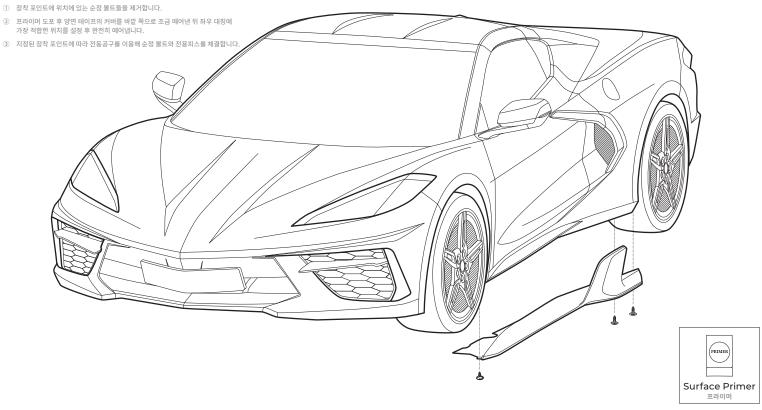


*Before applying the doublesided tape, use the enclosed primer to car body paint. (Surface primer can scratch car paints)

*양면테이프 부착 전, 동봉된 프라이머를 이용해 표면 작업을 해줍니다. (프라이머 과사용시 도장면 손상 주의)

Install Points 장착 포인트

*After applying primer on the car body, remove the film of the double-sided tape slightly outward. Once fitting is adjusted perfectly completely remove double-sided tape.

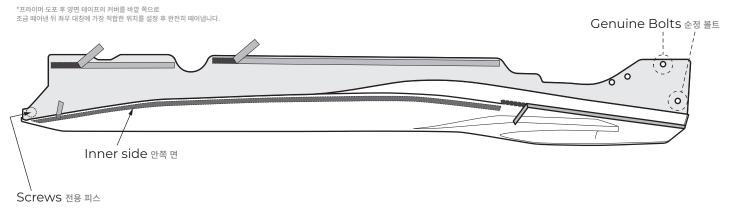

Installation Manual 장착 설명서


Rear 후면부

Carbon Fiber Rear Diffuser ग्रथमणि वाल प्रस्त

- ① Remove the rear bumper and then remove the OEM Diffuser
- 2 Remove the genuine rear sensor and sensor bracket according to the designated install points.
- 3 Set all components with the power tool according to the designated install points.
- ① 리어 범퍼를 탈거 한 후 디퓨저를 분해합니다.
- 지정된 위치에 있는 후방 주차 센서와 센서 브라켓을 빼낸 후 가공 포인트에 따라서 가공합니다.



The rear parking sensor process points

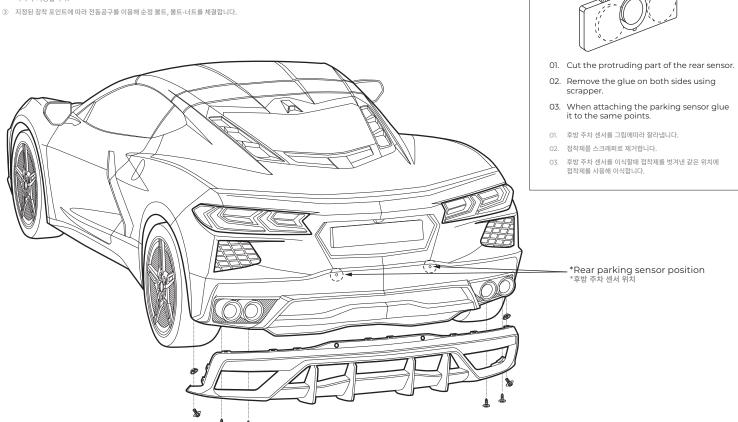

Install Points 장착 포인트

