

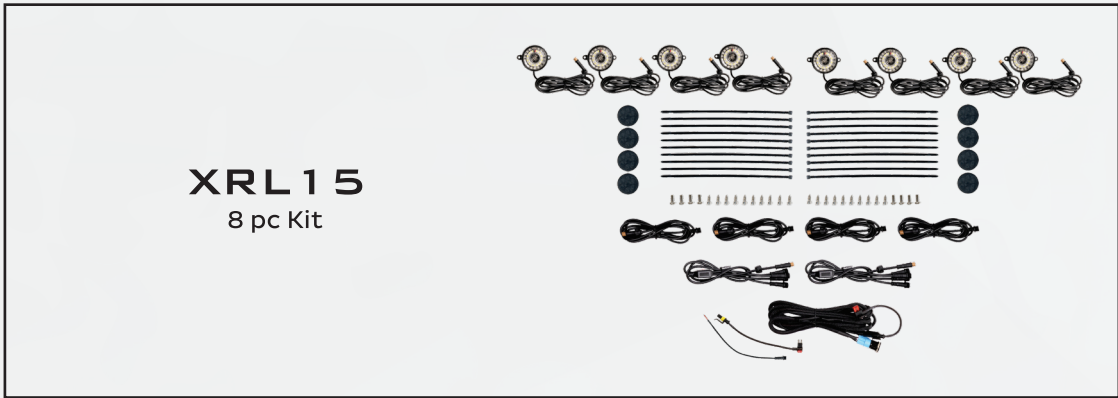


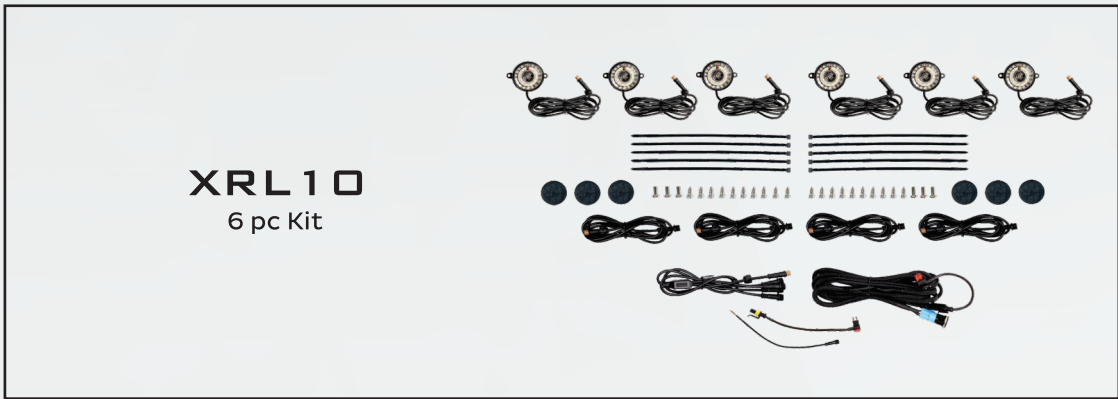

THE AUTOMOTIVE LIGHTING BENCHMARK

# INSTALL GUIDE

## WHITE ROCK LIGHT KIT

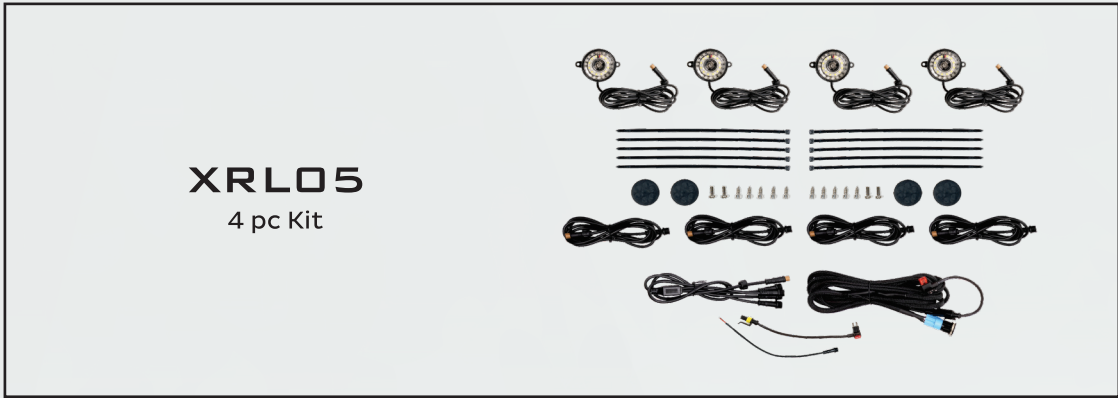

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

WARNING: It is the installer's responsibility to confirm compliance with state and local laws.



# WHITE ROCK LIGHT KIT


## TABLE OF CONTENTS

- SYSTEM DIAGRAM - 4 POD (XRL05)
- SYSTEM DIAGRAM - 6 POD (XRL10)
- SYSTEM DIAGRAM - 8 POD (XRL15)
- WIRING & INSTALL TIPS


## PAGE

3  
4  
5  
6


## WHAT'S INCLUDED

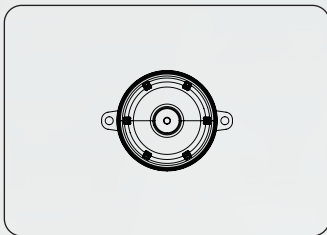


4-8x ROCK LIGHTS

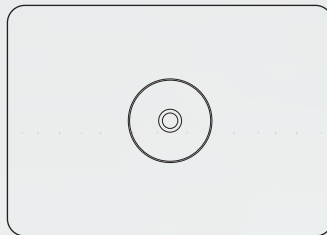


4-8x MAGNET MOUNTS

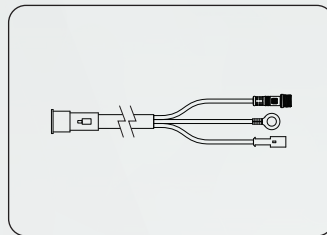


1x SWITCHED HARNESS

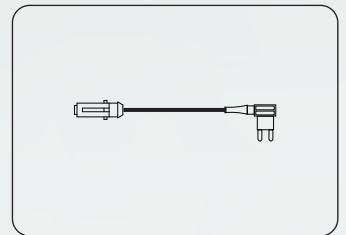


2x FUSE TAPS

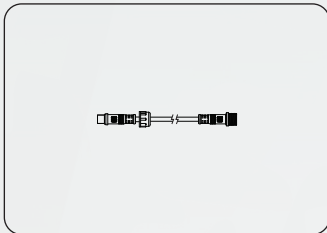


4x EXTENSIONS

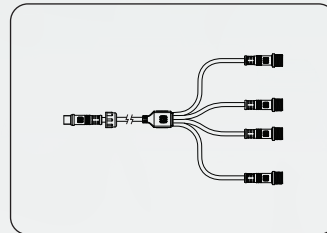

1-2x SPLITTERS  
(6/8-POD KITS ONLY)

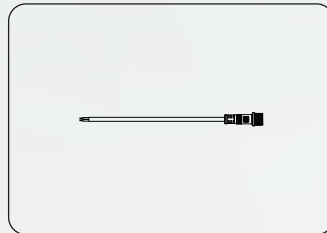

1x UPFITTER PIGTAIL

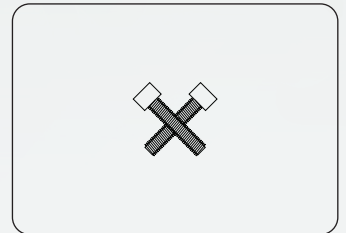

INSTALLATION HARDWARE

## NOTE:

These kits are designed to be universal. Each kit includes a variety of splitters and extensions to help make installation at the four corners of your vehicle as easy as possible. To watch a real install and see the kit in action, we have documented the process on several of the most popular applications on our YouTube Channel:




## REQUIRED TOOLS

- 3MM HEX KEY / BIT DRIVER
- 12V TEST LIGHT, VOLTMETER, OR MULTIMETER




# SYSTEM DIAGRAM - 4 POD KIT (XRL05)

(Not to scale)

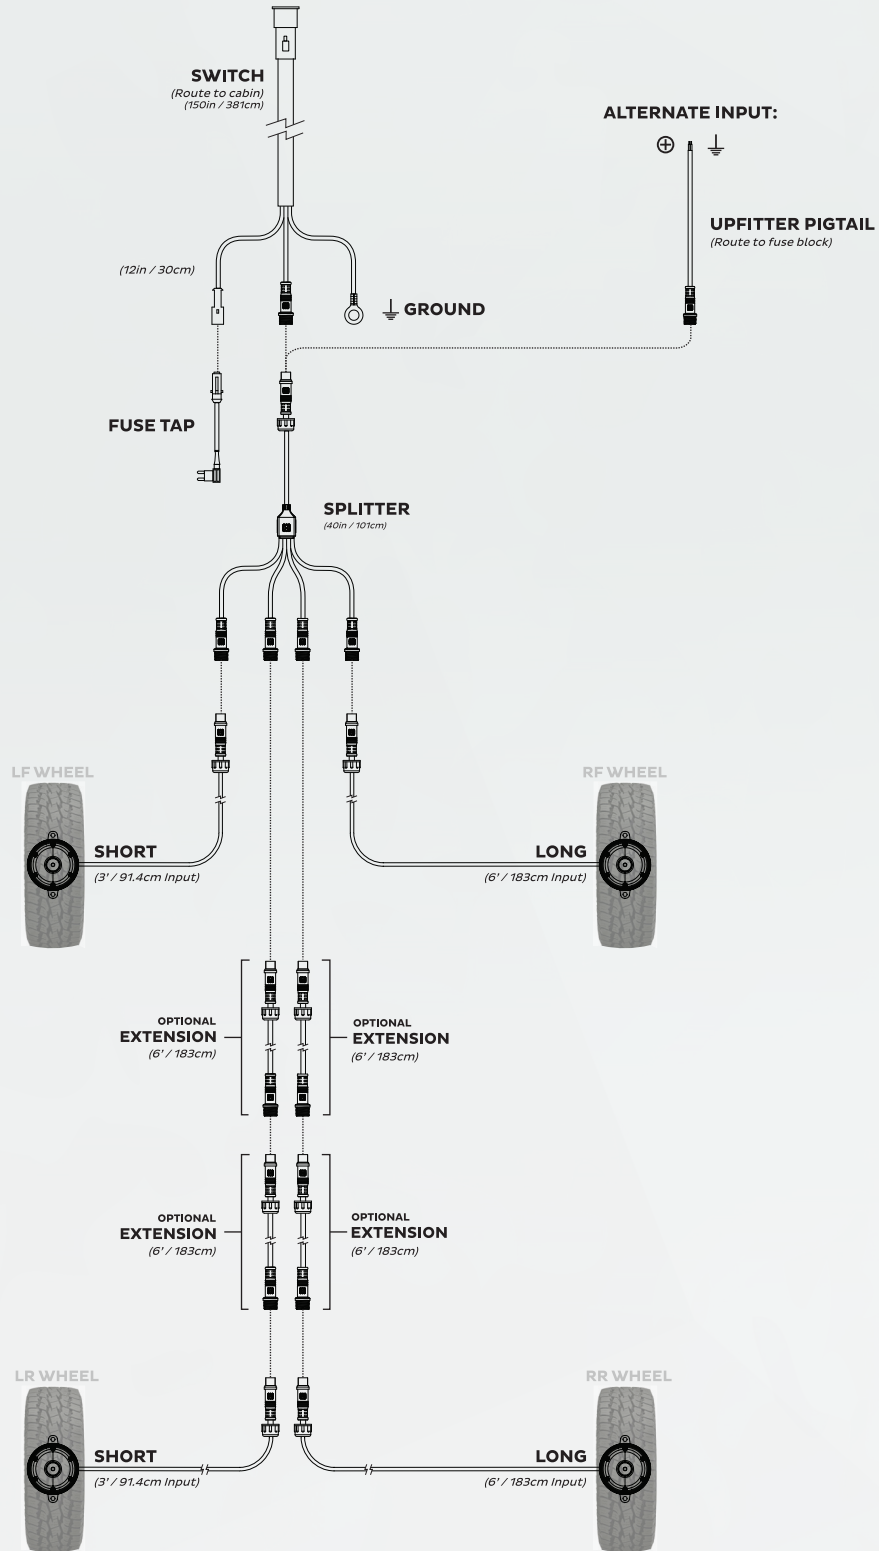


# SYSTEM DIAGRAM - 6 POD KIT (XRL10)

(Not to scale)

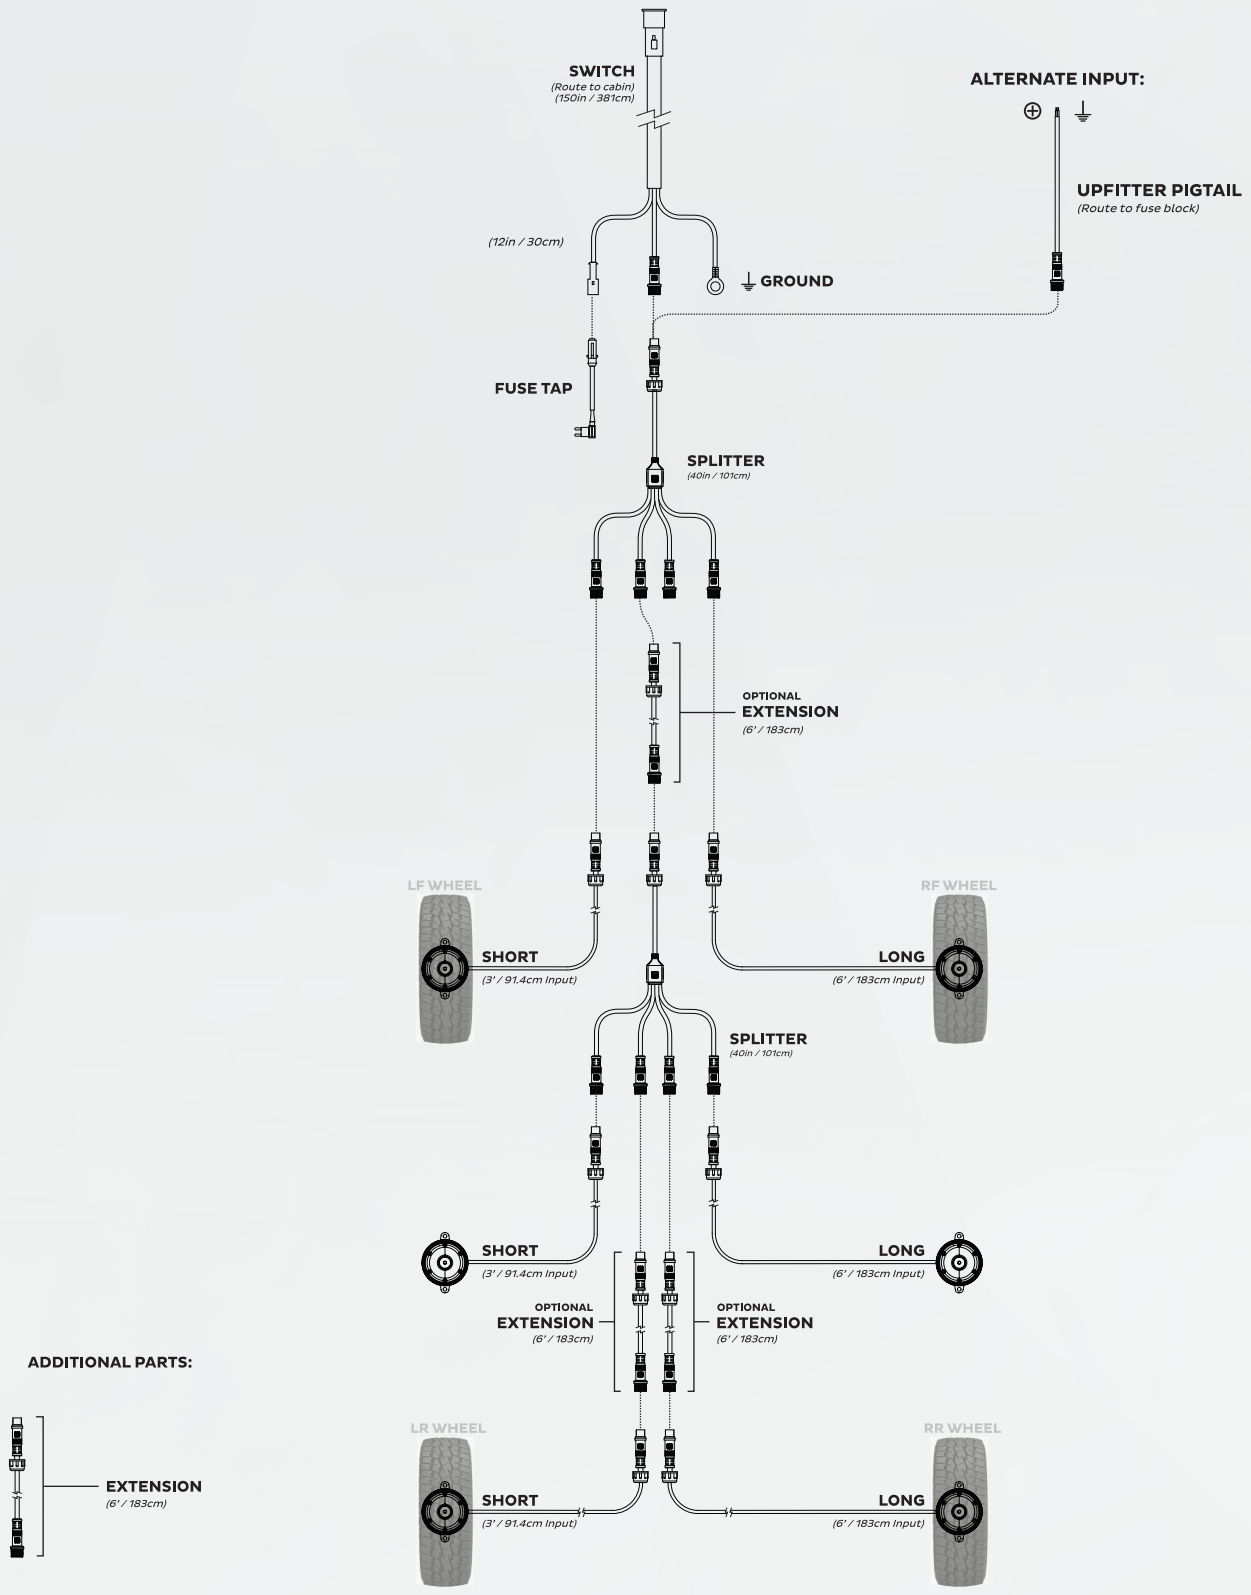


**ADDITIONAL PARTS:**

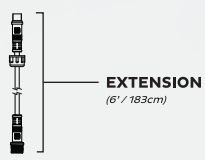


# SYSTEM DIAGRAM - 8 POD KIT (XRL15)

(Not to scale)

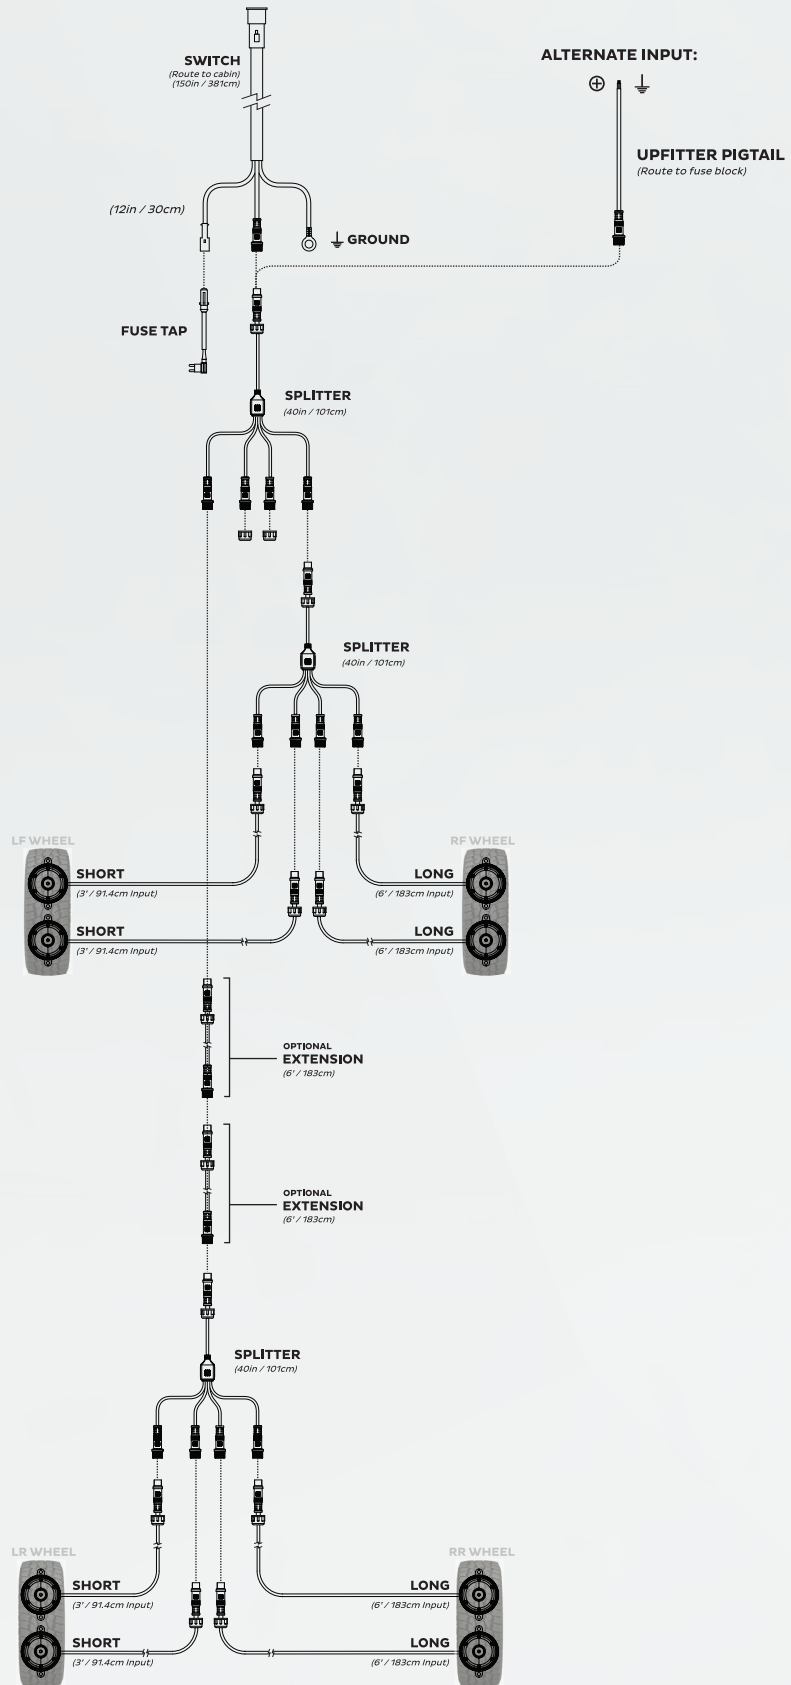


## ADDITIONAL PARTS:

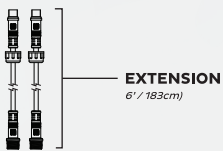

## WIRING & INSTALL TIPS


1

With all barrel connections, line up the two arrows, press the connection snugly together, and then finger-tighten the retaining nut to secure.

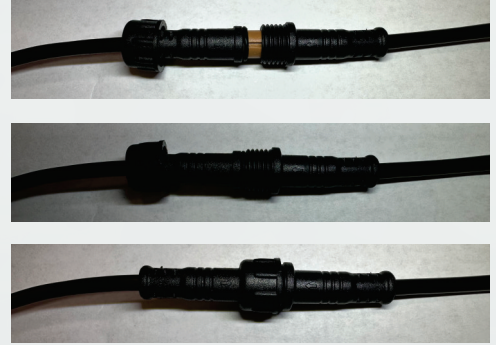


2

In the accessory fuse box of your vehicle, locate an unused fuse slot that has ignition-switched power using a voltmeter, multimeter, or test light.

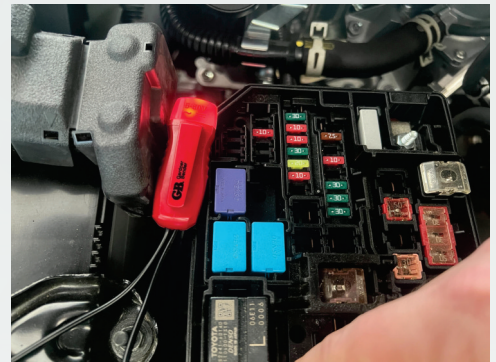

3

Referencing the two fuse taps included with your rock light kit, determine which tap is the correct model for the powered slot located in step #4. Insert the fuse tap blades into the slot.

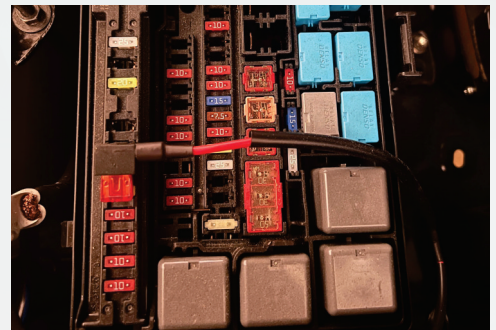

4


To route the fuse tap wiring out of the fuse box, a small notch in the cover may be necessary



5

When installing the push-button switch, an 11/16in / 18mm hole must be drilled in the location you choose.

(Note: switch housing color may differ.)

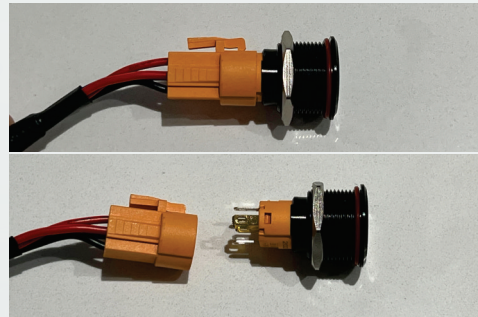

6

The rock lights can be mounted to your vehicle using either the included sheet metal screws or magnet mounts.



7

To install the magnet, first remove the center 3mm hex bolt and set aside. The washer will be reused.



8

Install the existing washer on the provided longer screw and reinstall into the center of the rock light. Snug up.



9

Thread the magnet onto the end of the longer screw and hand tighten. The rock light can now be stuck to a metal surface within the wheel well.

