



13000 Temple Avenue
City of Industry, CA 91746
T. 626-937-6988

CSB7049
Strut Tower Bar Installation Instructions
2013-2022 Scion FRS/ Subaru BRZ/ Toyota GT-86

**READ INSTRUCTIONS THROUGH COMPLETELY BEFORE BEGINNING INSTALLATION.
FAILURE TO DO SO MAY RESULT IN COSTLY ENGINE DAMAGE!!!**


**FOR YOUR SAFETY ALLOW ENGINE TO COOL FOR AT LEAST AN HOUR BEFORE
BEGINNING INSTALLATION.**

**IF YOU ARE NOT COMFORTABLE AND/OR FAMILIAR WITH THESE INSTRUCTIONS,
PLEASE REFER THIS INSTALLATION TO A QUALIFIED PROFESSIONAL.**

1. With the car set on the ground, remove six (6) nuts and the two (2) bolts holding the O.E.M. strut bars in place **(Picture A)**.
2. Remove two (2) O.E.M. strut bars. (Bars will not be re used)
3. Remove the two (2) nuts that hold the shock to the shock tower **(Picture A)**.
4. Install the DC Sports Carbon Steel Strut Tower Bar over the shock tower studs on each side and on the back
5. Install the two (2) bolts that were previously removed back into the center mount.
6. Install the nuts on the center and side mounts.
7. Tighten down all the nuts and bolts. Torque down the shock nuts to 17 ft/lbs. (23 N/M) and the rest to 12 ft/lbs. (16 N/M).
8. Ensure that the DC Sports Carbon Steel Strut Tower Bar does not interfere with any parts of the vehicle.
9. **RECHECK ALL YOUR WORK.**

PARTS LIST

Quantity	Part number	Part Description
1	<i>CSB7049</i>	<i>CS-3 Carbon Strut bar</i>
2	<i>DCS1008</i>	<i>DC Sports Decals</i>

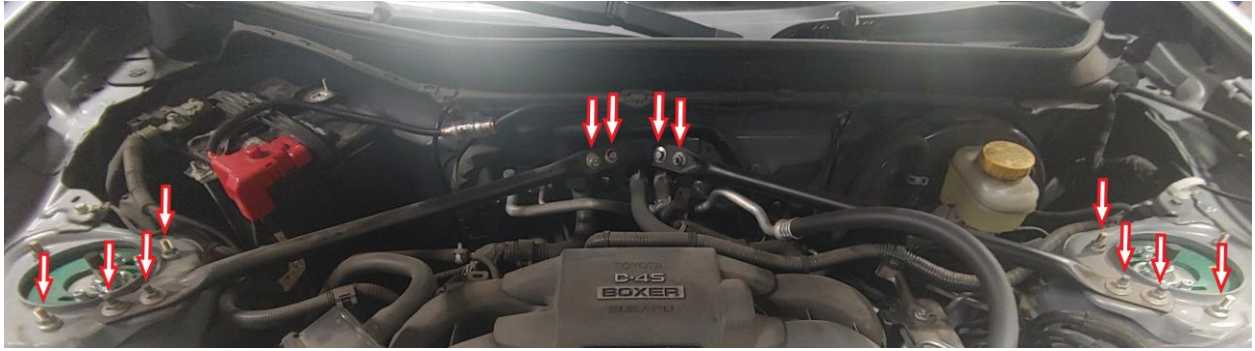

Picture A



THANK YOU FOR CHOOSING DC SPORTS