



INSTALLATION GUIDE

2009+ Audi A4 2.0T Single Outlet Exhaust System

Congratulations on your purchase of the AWE Tuning high performance exhaust for the 2009+ Audi A4 2.0T.

Exquisite build quality with industry leading performance distinguishes this exhaust system from all others.

Contact us with any installation questions.

215-658-1670

AWE-Tuning.com

performance@AWE-Tuning.com

Exhaust System

- 1 inlet adapter (part EU)
- 1 mid muffler (part ET)
- 1 driver side outlet tube (part EN)
- 1 rear Helmholtz resonator section (part DG)
- 2 3.15" slash cut tip (optional 8nish)
- 4 63.5mm Accu-Seal clamp
- 2 2.25" high temp t-bolt clamp
- 2 hanger lock collar
- 1 allen key
- 1 tube exhaust paste sealant

Optional Downpipe

- 1 downpipe section with flex joint (itemBC)
- 1 cat to downpipe gasket
- 3 M8 x 30mm stainless bolt
- 3 M8 copper exhaust nut
- 6 M8 washer

Step 1

Installation of the AWE Tuning exhaust system is essentially the reverse of removal.

The AWE Tuning exhaust slips over top of the downpipe outlet, using a supplied 63.5mm clamp to fasten. To ensure a leak free seal at each slip joint throughout the system, use the enclosed exhaust paste sealant.

Before removing the factory downpipe, first soak the fasteners in a penetrating oil for several hours to ensure easy removal.

Fasteners are included with the optional downpipe to replace the factory parts. Use a quality anti-seize compound on all fastener threads during re-assembly.

Step 2

Install AWE Tuning exhaust parts as shown in **Figure 2** below. Refer to the Parts List on page 1. Note that there are several adjustment points on the AWE exhaust to ensure proper fitment. Also note that the factory exhaust hangers are also adjustable with slotted bolt holes to allow further fine tuning.

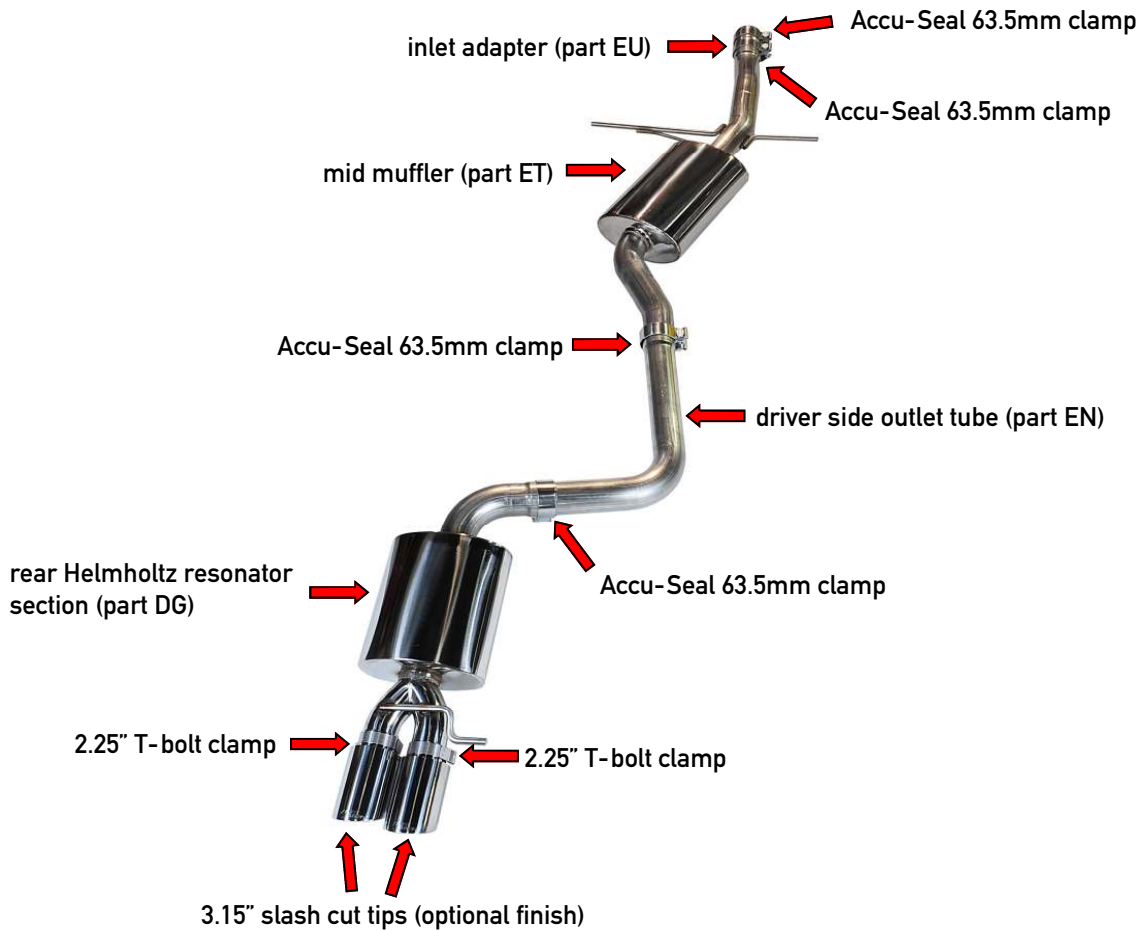


Figure 2

Step 3

Each rear tip is rotationally adjustable to ensure that the AWE Tuning logo remains centered when the exhaust is installed, and also length adjustable to suit personal taste.

When adjusting the length of the tips, make sure that the tip and tailpipe of the muffler overlap at least the width of the clamp (arrow in Figure 3). This overlap is very important to ensure that the clamp has enough surface area to tighten down to in order to keep the tip from falling off while driving!

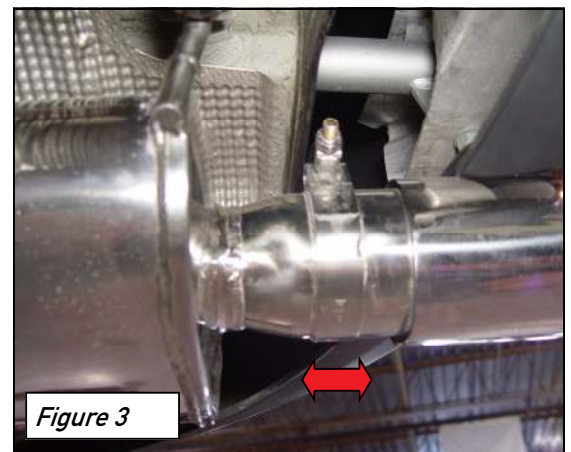



Figure 3

Step 4

Once the exhaust system is properly adjusted, install a hanger post clamp on each side of the rear muffler rubber element, as shown at arrows in **Figure 4**. Slide one clamp onto the hanger post before insertion through the rubber element and the other one so that it sits snug against the rubber element, and then tighten both down with the enclosed allen wrench.

These clamps will keep the exhaust from sliding laterally under usage and will keep the tips properly aligned in the valence opening.

Set final tip rotation, stagger, and overall length, and then tighten their T-bolt clamps.

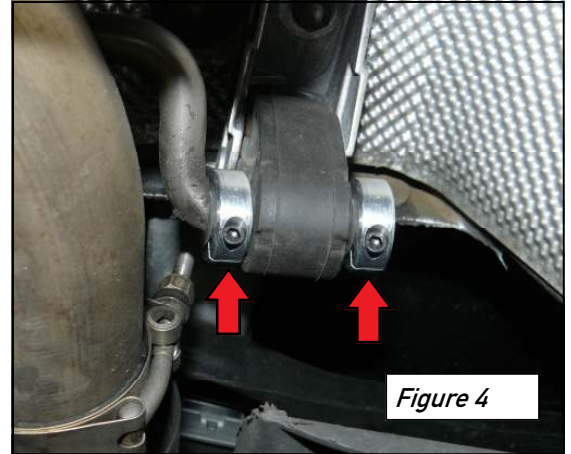

ENJOY

Once installed properly, your AWE Tuning high performance exhaust will provide a lifetime of trouble free performance.

Please note that the exhaust volume and sound will settle with usage. 800-1000 miles is typically required to fully break in a new exhaust system.

Also please note that the rear Helmholtz resonator has a small drain hole to allow condensation to escape. Water drops from this area are normal.

Periodic cleaning of exhaust tips is necessary to maintain proper finish, especially in areas prone to road salt and caustic deicing solutions.

A gentle metal polish can be used to bring back the luster on our silver 8nish tips.

Do **NOT** use metal polish on our Diamond Black finish tips. Instead, use a mild soap and water solution periodically to clean the 8nish.



Any questions or comments,
please do not hesitate to contact us:

1-888-565-2257
AWE-Tuning.com
performance@AWE-Tuning.com



AWE Tuning
199 Precision Dr
Horsham, PA 19044
215.658.1670
sales@awe-tuning.com

Thank you for choosing AWE Tuning as your performance automotive parts supplier. Please remember that a performance car is only as strong as its weakest link. Therefore, it is vital that you maintain your vehicle to factory specifications.

By installing or using the purchased product, the Consumer accepts this warranty and any specific Manufacturer warranties enclosed.

Limited Warranty

The following warranty is valid only in the United States.

The Manufacturer's full warranty applies to all products sold.

Secor Ltd. (AWE Tuning) warrants to the original retail purchaser (Consumer) this product (B8 A4 2.0T Single Outlet Exhaust, Resonated Downpipe) against manufacturing defects for LIFETIME.

Upon verification of warranty coverage, AWE Tuning will repair or replace the defective product at their discretion, without charge. This is the only remedy the Consumer has for any loss or damage, however arising, due to nonconformity in or defect of the product. This warranty does not cover consequential damage, loss of time or revenues, inconvenience, loss of use of vehicle, damage to the vehicle or components, shipping costs, or other incidental or indirect damage.

All warranties are void if the product was not installed by a certified auto mechanic, improperly serviced, modified, or used in a way not intended by the Manufacturer. Use of product in Motorsports or Racing conditions is grounds for warranty denial. Motorsports and Racing is an inherently abusive operational condition, and it is impossible to warranty for this type of usage.

The Consumer is responsible for ensuring that the product is installed in a safe and proper manner, and should cease usage of the product immediately if an unsafe or improper condition is noted. If an unsafe or improper condition is noted, the Consumer should then immediately contact the facility where the product was installed or AWE Tuning directly.

Please contact the original place of purchase for any warranty claims or explanations of this document.