

[034Motorsport X34 Carbon Fiber Intake Air Scoop, B9](#)

**034 MOTOR SPORT**

034Motorsport's X34 Carbon Fiber Intake Air Scoop for the B9 chassis is the new standard in performance and durability. This air scoop was engineered with performance and great looks in mind. Manufactured from carbon fiber, for strength, light weight, and long lasting great looks.

Installation Spiciness Rating



(Mild)

Installation of your 034Motorsport X34 Carbon Fiber Air Scoop for the Audi B9 is a straightforward process that will take less than 10 minutes to complete.

Supplied Parts:

- 034Motorsport X34 Carbon Fiber Intake Air Duct Kit

Tools Needed:

- T25 Torx
- 3mm Allen wrench – if you have the [034Motorsport X34 Carbon Fiber Intake Duct](#)
- Thumbs

About This Guide

This Install Guide documents the installation process on a 2018 Audi S4 with the [034Motorsport X34 Cold Air Intake](#). There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

- Ensure you have all parts and tools required for installation by reading the complete Install Guide.


Step 1

Open the hood and locate the hood release lever and radiator cover.




Step 2

Press the button on the back of the hood release lever, and pull off the lever.

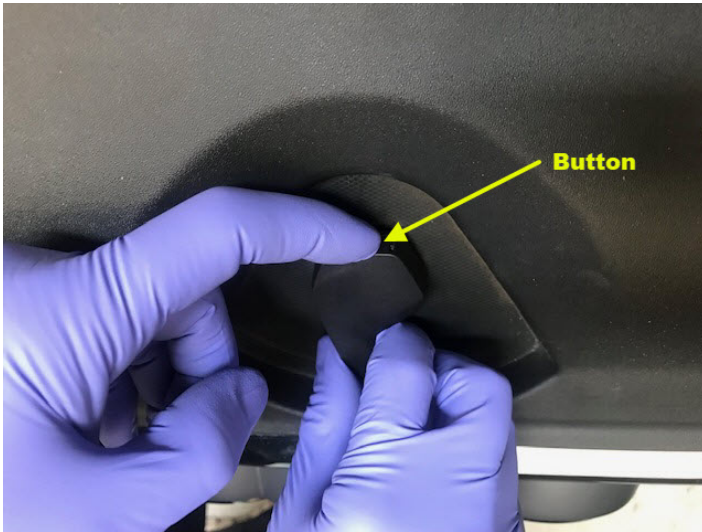

Step 3

Gently pry up on front edge of the radiator cover, and slide out of rear slot to remove.

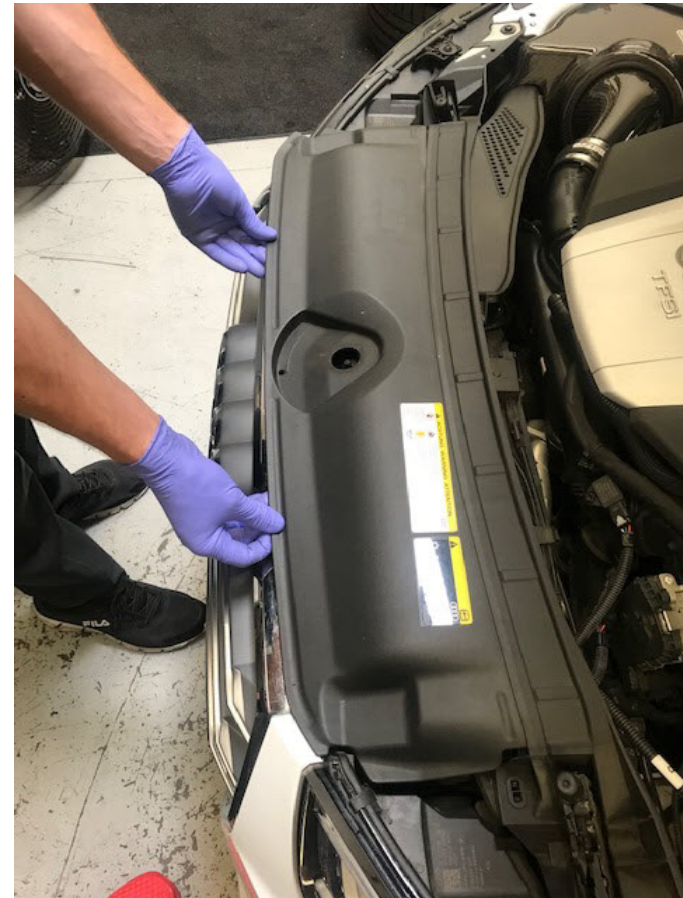

Step 4

Using a T25 Torx bit, remove the two screws attaching the stock scoop to the duct. Remove the scoop.



Step 5

Install the 034Motorsport X34 Carbon Fiber Air Scoop. Using a T25 Torx bit (if retaining the stock air duct), or a 3mm Allen (if installing the [034Motorsport X34 Carbon Fiber Intake Duct](#)) and torque to 3NM (2 ft-lbs).



Step 6

Reinstall radiator cover by sliding it into the rear slot, and snapping the front edge down. Be careful to align front tabs to avoid breakage when snapping in.



Step 7

Reinstall hood release lever, and admire a job well done!

