

MQB/MQB EVO Dogbone Insert**034 MOTOR SPORT**

This precision-machined billet aluminum insert is designed to fill the large voids in the factory dogbone mount, and limit transmission and engine movement without sacrificing ride quality or introducing any perceivable additional noise, vibration, or harshness into the cabin. By filling the void in the factory mount, this insert eliminates the associated slop and ensures that you're experiencing crisper shifts and a more direct, connected driving experience.

Installation Spiciness Rating: MILD

Installation of your 034Motorsport Dogbone Insert is a straightforward process that should take approximately 45 minutes to complete.

Supplied Parts:

- 034Motorsport Dogbone Insert

Tools Needed:

- 21mm Socket
- Torque Wrench

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

About This Guide


This Install Guide documents the installation process on an 8V Audi S3. There may be minor differences depending on specific vehicle, market, options, etc.

Note: We recommend replacing all torque-to-yield hardware.

Install Steps

Step 1

Raise the vehicle securely to gain access to the front subframe.

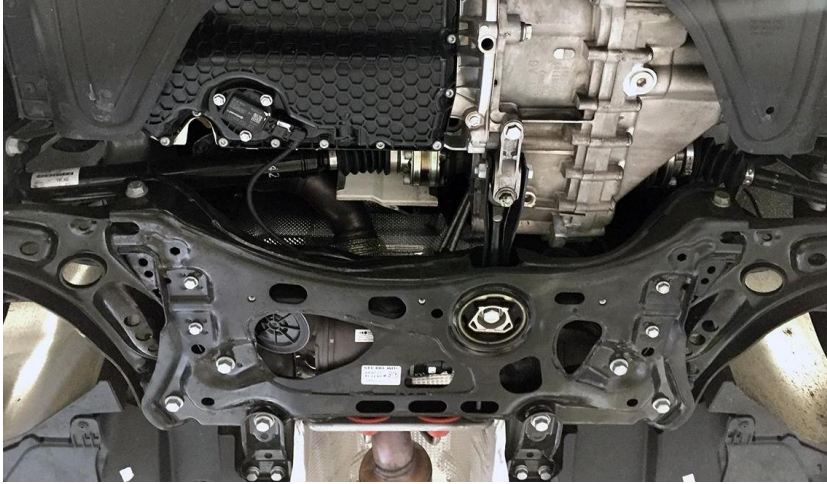

Step 2

Using the 21mm socket, remove the factory bolt.



Step 3

Install the Billet Aluminum Dogbone Mount Insert into the voids. It should be positioned with the 034 logo towards the front of the car.



Step 4

Using the 21mm socket, install a **new** factory bolt.

Torque to 130Nm+90°.



Step 5

You're done! Enjoy crisper, faster shifting, improved throttle response, and harder launches!